

ROAM R41 Quick Start Guide




KIT#:

R41-9B-001 | R41-YB-001 R41-9B-002 | R41-YB-002 R41-9B-003 | R41-YB-003


Main Unit Automobile Auxiliary Power Adapter Server Antenna* Mounting Hardware Ground Cable

Install Donor Antenna

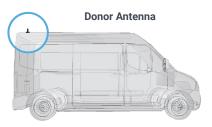

Mount your **Donor Antenna** on the exterior and towards the rear of your automobile or boat, depending on the design and type of vehicle. Make sure you consider the cable connection to the Main Unit with your location choice. Note: For best performance, ensure there is 50 cm of metal around the base of the antenna.

Select the Main Unit Location

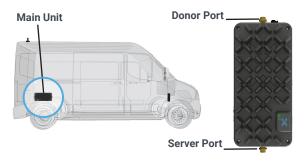


Find a suitable location to securely mount the **Main Unit.** When installed, the Main Unit should have airflow and be in a position that doesn't contact other objects. Make sure the location provides enough distance for all the cables to connect. It's best to ensure all cables reach desired locations BEFORE mounting the device.



Using the provided M3 screw, attach one end of the ground cable to the Main Unit and the other end to the chassis of the automobile or boat.


Install the Server Antenna

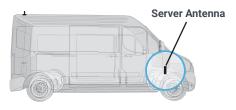

Install the **Server Antenna** in the cabin/deck towards the front of the vehicle where coverage is needed. Make sure to mount the Server Antenna horizontally.

Note: The **Donor Antenna** should be separated/isolated as far away as possible from the **Server Antenna**, greater separation provides the best performance.

Attach Server and Donor Antennas

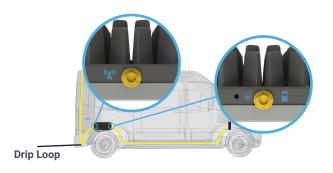


Attach the Donor Antenna and Server Antenna to the Main Unit. Note: Adding a drip loop to the **Donor Antenna** cable is crucial as it prevents water from flowing down the cable and damaging the Main Unit's electronic equipment.

Install Ground Cable



Plug in the Main Unit

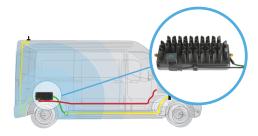

Using the provided M3 screw, attach one end of the ground cable to the Main Unit and the other end to the chassis of the automobile or boat.

Nextivity WAVE Software

Download the **WAVE App** to monitor and manage the status of your **ROAM R41**.

Scan to Download





Download the **MyWave App** to set your **ROAM R41** to automatically track the base station to which your phone is connected.

Scan to Download




Bluetooth





Marine Installation

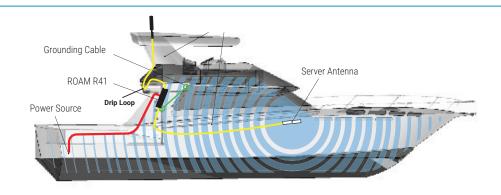

Model#	Bands Supported	Link	Output Power (dBm)
R41-YB	1/3/5/7/8/26/28L	Downlink Uplink	<u>0</u> 22
R41-9B	1/3/7/8/20	Downlink Uplink	0 22
Power/Status LED Indicator			
LED Behavior		Translation/Error State	
No light		Device is powered OFF	
Solid Orange		Device is powered ON	
-		Device is booting up	
Slow blinking green		Device is band scanning to acquire network signals	
Solid Green		Device is operating normally and providing coverage	
Solid Red		Hardware Error (ES1)-Disconnect & Reconnect	
Flash RED 1 time & OFF for 4sec		Device is not receiving signal from the cellular network (ES2)	
Flash RED 2 times & OFF for 4sec		Donor input signal is too strong for the device (ES4)	
Flash RED 3 times & OFF for 4sec		Device's server antenna is too close to donor antenna (ES7)	
Flash RED 4 times & OFF for 4sec		Device is disabled by the operator (ES9)	
Flash RED 5 times & OFF for 4sec		Device location lock pending (ES10)	
Flash RED 6 times & OFF for 4sec		Device registration pending (ES11)	
Flash RED 7 times & OFF for 4sec		Device Self-Test Failed (ES12)	